



Installation Instructions
717867
2003-12 DODGE RAM 2500/3500,
2006-08 1500 MEGA CAB
5.7L ENGINE
All Wheelbases

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	26332M	Inlet Pipe	1
2	71249-Z	FlowFX Muffler	1
3	26778M	Tailpipe Assembly	1
4	ST509B	Tip	1
N/A	PK1011	Hardware Pack includes:	1
5	392HA	Clamp Hanger Assembly	1
6	416HA	Front Pipe Clamp Hanger Assembly	1
7	MC300BS	3" Band Clamp	2
8	HW502	3/16" Hanger Keeper	1


REMOVE STOCK EXHAUST SYSTEM:

2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.


WARNING:
 Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:

- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

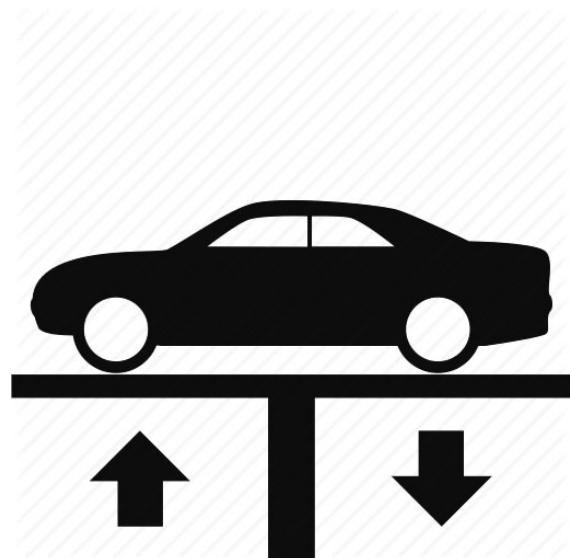

3. Cut tailpipe at muffler exit. Disassemble hanger wires from isolators and remove tailpipe section from vehicle.

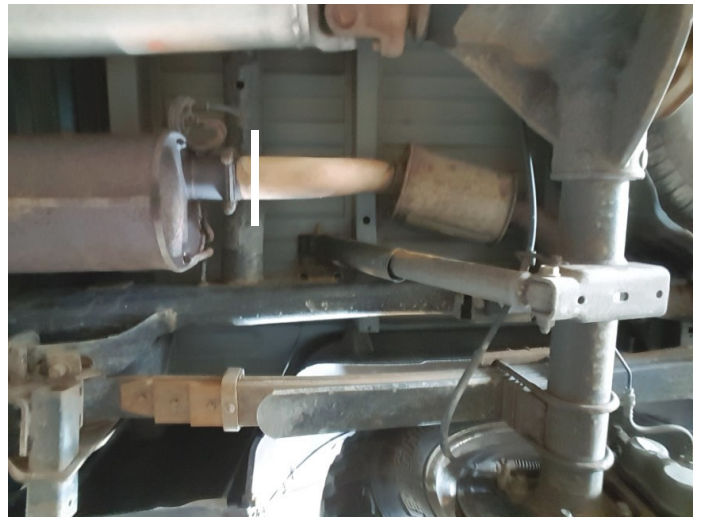

4. Support muffler and disassemble wire hangers from isolators. Remove clamp on slip connection behind cat. converter. Heat or cut slip connection to separate components, then remove muffler portion of exhaust from vehicle.



INSTALL FLOWMASTER EXHAUST SYSTEM

5. Remove nuts from Flowmaster clamps, apply anti-seize compound to bolts and re-install nuts.
NOTE: The image in this step is intended for illustrative purposes only and may or may not accurately reflect components included in your kit.
6. Every slip fit connection in this kit must seat 3" deep except for muffler connections which must seat 2" deep. Find all slip fit components in your kit and mark them accordingly so your Flowmaster exhaust system fits properly onto your vehicle.

