



Installation Instructions

817843

2019-2021 RAM 1500

5.7L ENGINE

2/4 WD & 141, 145, 154" Wheelbases

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	26748S	Inlet Pipe	1
2	26749S	Extension Pipe	1
3	8530572-226	AMT Muffler	1
4	26729S	Right Tailpipe	1
5	26730S	Left Overaxle Pipe	1
6	26731S	Left Exit Pipe	1
7	ST462B	Tips	2

ITM #	PART #	DESCRIPTION	QTY.
N/A	PK966	Hardware Pack includes:	1
8	MC300BS	3" Stainless Band Clamp	5
9	HW211	3/8"-16 x 2 Hex Cap Screw G5	2
10	HW103	Finish Head Nut 3/8"-16 Z 5	2
11	HW303	Zinc USS 3/8" Flat Washer	2
12	HW309	Zinc 3/8" Lock Washer	2
13	HW502	7/16" Hanger Keeper	5

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:

Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:

- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

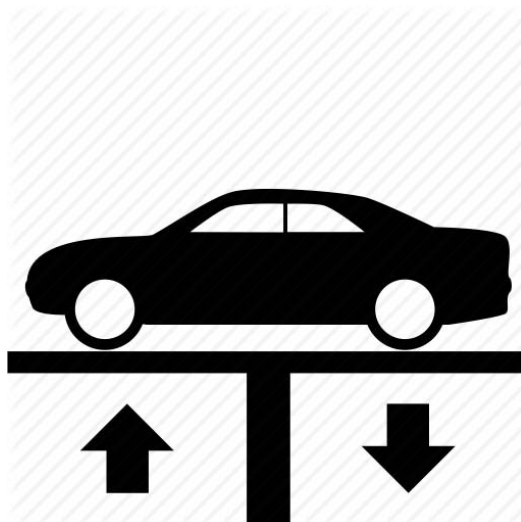

3. Remove passenger side tailpipe from vehicle by loosening clamp and dismounting wire hanger from stock mount.



4. Remove factory tailpipe from vehicle by cutting it near muffler outlet and dismounting wire hangers from factory mounts.



5. Remove factory muffler wire hangers (x3) from factory isolators and detach grounding wire.

