



Installation Instructions

717860

2009-19* RAM 1500

5.7L HEMI ENGINE

Fits vehicles with factory dual tailpipes.

*classic body only

OVERVIEW:

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

NOTE: Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	TB467M	Inlet Pipe	1
2	72288-Z	Muffler	1
3	86533M	Right Tailpipe	1
4	86536M	Left Front Tailpipe	1
5	86534M	Left Rear Tailpipe	1
6	86535M	Exit Pipe	2
7	ST507B	Tips	2
N/A	PK500	Hardware Package includes:	1
8	MC250BS	2½" Stainless Band Clamp	5
9	MC300BS	3" Stainless Band Clamp	2

REMOVE STOCK EXHAUST SYSTEM:


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

WARNING:



Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

To ease preparation and installation of your new kit:



- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

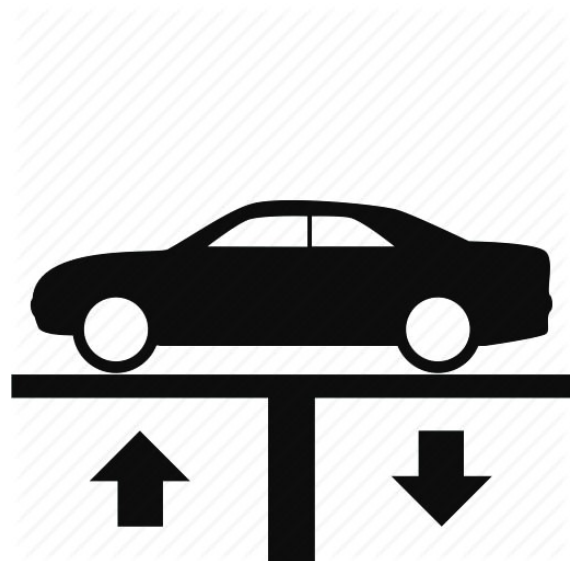

3. To ease disassembly, cut factory tailpipes off just behind muffler exit.

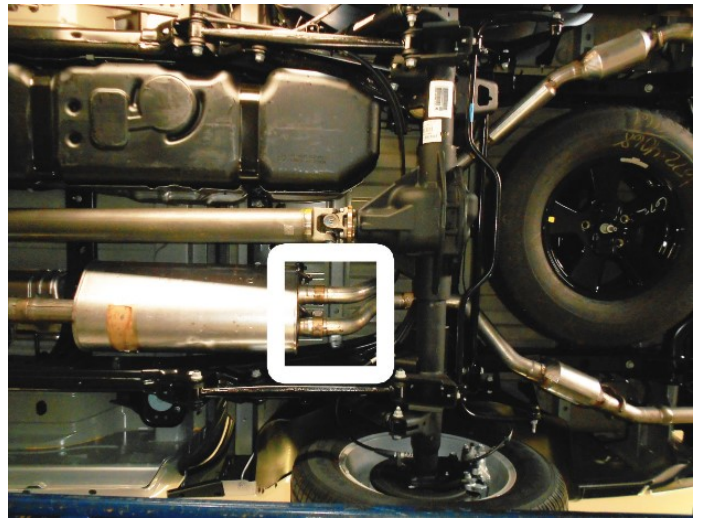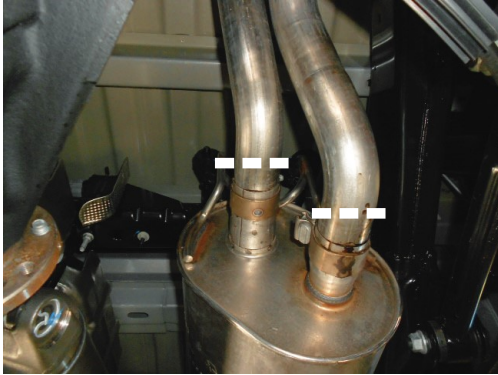

4. Dismount tailpipes from factory isolators (x3) and remove them from vehicle.

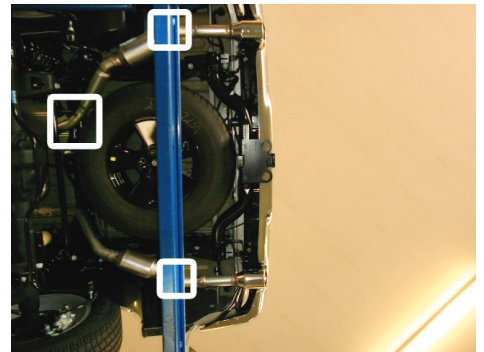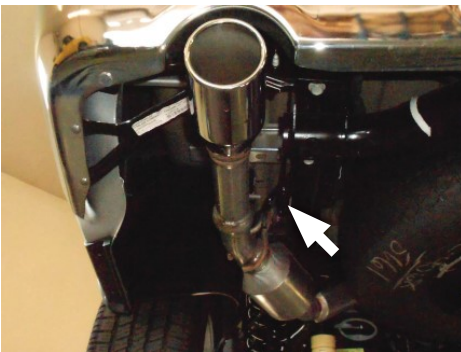

5. Loosen clamp securing muffler to inlet pipe, dismount muffler from factory isolators (x2), unclip ground wire and remove assembly from vehicle.

