



Installation Instructions  
**717847**  
2019\*-2021 RAM 1500  
5.7L HEMI ENGINE  
2/4 Wheel Drive, All Wheelbases  
With Factory Single or Dual Tailpipes  
(\*Does Not fit 2019 Classic Body)

**OVERVIEW:**

1. Take a moment to read and understand these instructions before installing your Flowmaster performance system.

**NOTE:** Please inventory all parts now before continuing and if necessary, report any missing items to our tech line. This will avoid potentially stranding your vehicle until any missing replacement parts arrive.

ITM #	PART #	DESCRIPTION	QTY.
1	71229-520	Muffler	1
N/A	PK963	Hardware Pack includes:	1
2	MC300BS	3" Stainless Band Clamp	1
3	HW210	3/8-16 x 1 1/2" Bolt	2
4	HW303	3/8" Washer	4
5	HW309	3/8" Split Lock Washer	2
6	HW103	3/8-16" Nut	2

**REMOVE STOCK EXHAUST SYSTEM:**


2. Raise vehicle up on a hoist or rack to working height. If you don't have access to a hoist or rack, support vehicle with jack stands.

**WARNING:**

Avoid serious burns! Allow your vehicle time to cool completely before touching any factory engine components.

**To ease preparation and installation of your new kit:**

- Apply penetrating lubricant to mounts, bolts and clamps before you remove them.
- Use stands as necessary to support parts as you detach them from your vehicle and again as you install new parts.

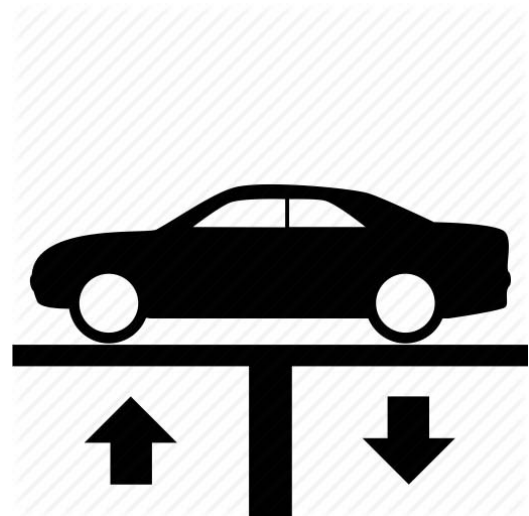

3. Mark line 1¼" back from factory muffler outlet. Then cut pipe to separate muffler. Deburr edges after cutting.



4. Remove bolts attaching muffler and front pipe. Remove grounding wire from muffler.



5. Remove muffler wire hangers from isolators, then remove muffler section from vehicle. Remove gasket from factory muffler inlet and retain for later re-use.

