



252 Granite St, Corona, CA 92879
PH (844) 469-6827
aFeControl.com


2007-2020 Jeep Wrangler JK/JL 2020 Gladiator JT Steering Stabilizer Installation

Parts List:

-1 Sway-A-Way Steering Stabilizer

Tool List

-18mm socket
-Jack and jack stands
-Safety glasses

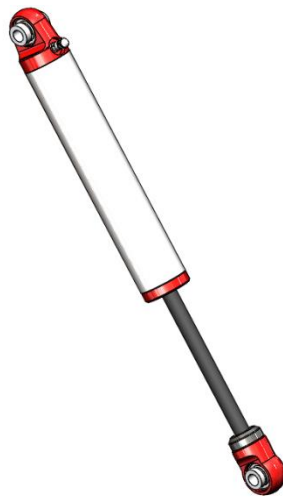

Installation Procedure for JK/JL/JT Steering Stabilizer (Steering Stabilizer already charged with Nitrogen)

1. Park the vehicle on a level concrete surface where it is safe to work on your vehicle.
2. Center the steering wheel.
3. Place blocks in front and behind the rear tires so as to keep the vehicle from moving forwards or backwards.
4. Jack the vehicle up under the front differential and place safely on jack stands under the front frame horns. Slightly raise the front end until you can freely turn the wheels left and right.

5. Use **18mm** socket and remove the bolt from the OEM steering stabilizer on the steering shaft.



6. Use 18mm and remove the nut from the OEM steering stabilizer mount and remove the bolt on the hub.





7. Turn the wheels to the left until you can freely remove the steering stabilizer.

8. Place the top cap end of the SWAY-A-WAY steering stabilizer in the stabilizer mount on the passenger side of the vehicle with the Schrader valve is pointed towards the **rear** of the vehicle and reuse the OEM bolt and nut.



9. Turn the wheels until the rod end of the SWAY-AWAY steering stabilizer is lined up with the other stabilizer mount and reuse the OEM bolt and flange nut.

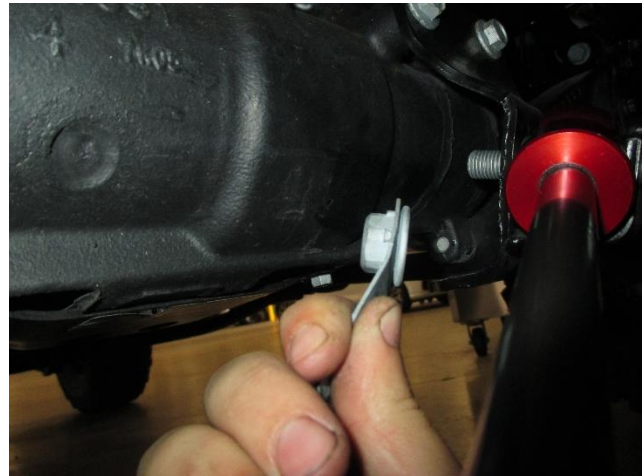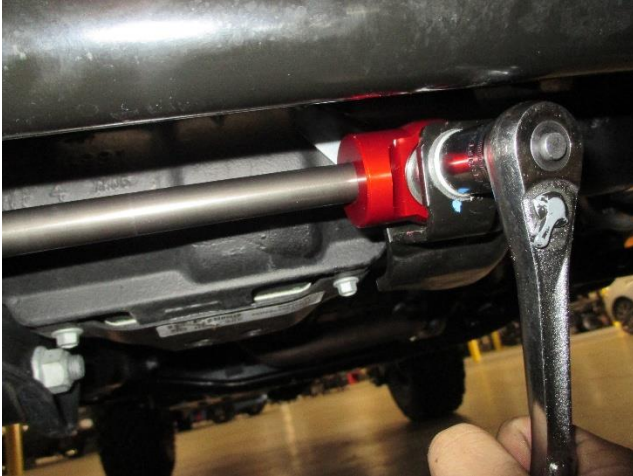

10. Torque down the steering stabilizer bolts to 50 ft-lbs.

