

Installation Instructions

Eibach Inc .264 Mariah Circle Corona, CA 92879 USA Tech Support 800-507-2338 ext. 114



END LINK KIT #AK41-51-022-01-02

Kit Contents

Description	Part Number	Quantity
End Link Assy.	UEL00050411	2

Notes


Read all instructions before beginning installation

Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.

Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.

Never work on or under a vehicle unless it is properly supported.

Installation

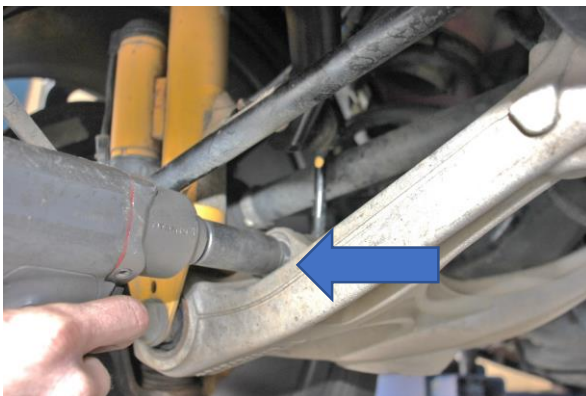

Step 1

Step 1. Remove the hardware that secures the end link to the control arm.




Step 2

Step 2. Remove the hardware that secures the end link to the end of the anti-roll bar.



Step 3

Step 3. Remove the end link.

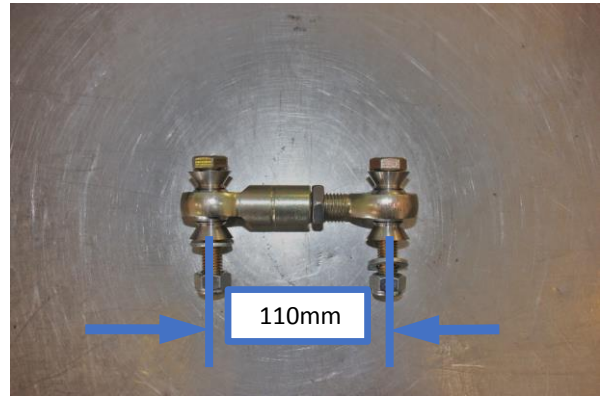


Step 4

Step 4. Adjust the end link to 110mm.



Step 5

Step 5. Loosely secure the end link to the anti-roll bar with the provided hardware as shown.

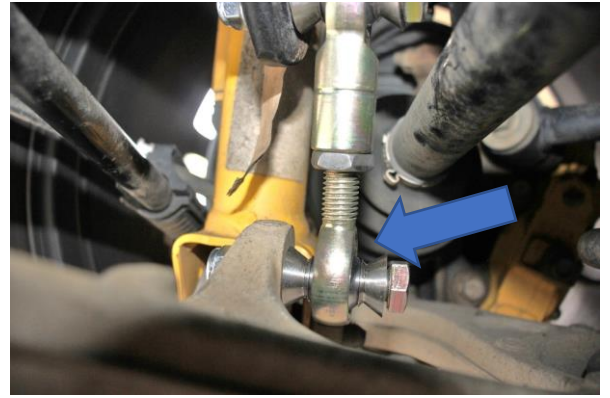


Step 6

Step 6. Loosely secure the end link to the lower control arm with the provided hardware as shown.




Step 7

Step 7. Tighten the upper end link hardware.

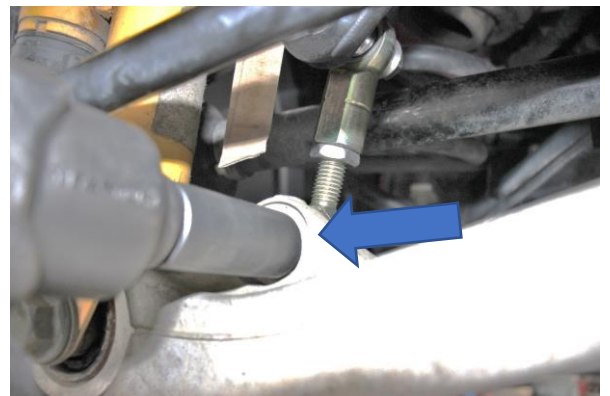

Step 8

Step 8. Tighten the lower end link hardware.

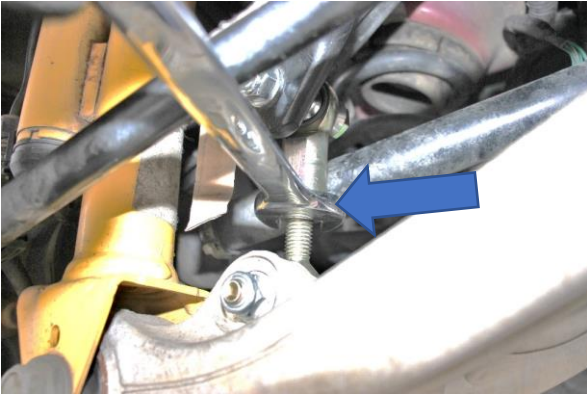

Step 9

Step 9. Make sure the upper and lower spherical ends are properly orientated, then, tighten the jam nut.
