

Installation Instructions

Eibach Inc .264 Mariah Circle Corona, CA 92879 USA Tech Support 800-507-2338 ext. 114



END LINK KIT #AK41-51-022-01-20

Kit Contents

Description	Part Number	Quantity
End Link Assy.	UEL00051102	2

Notes

Read all instructions before beginning installation

Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.

Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.


Never work on or under a vehicle unless it is properly supported.

Installation



Step 1

Step 1. Loosen and remove the OE hardware that secures the end link to the clevis..

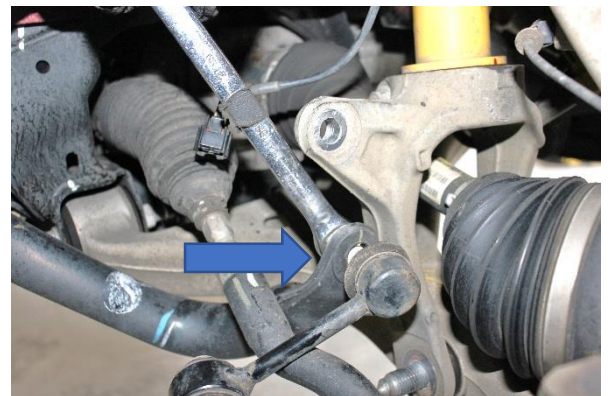


Step 2

Step 2. Loosen and remove the OE hardware that secures the end link to the anti-roll bar.




Step 3

Step 3. Remove the OE end link.

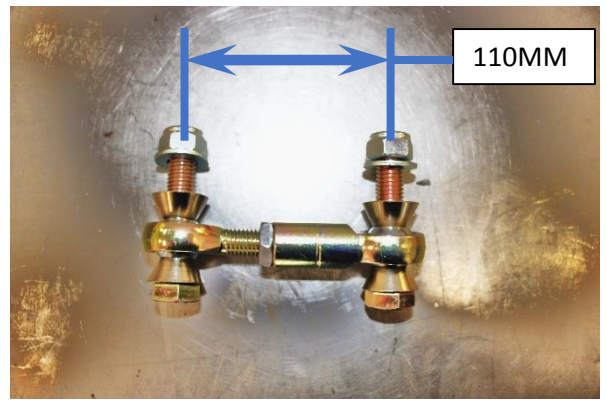


Step 4

Step 4. Adjust the Eibach end link to 110mm.

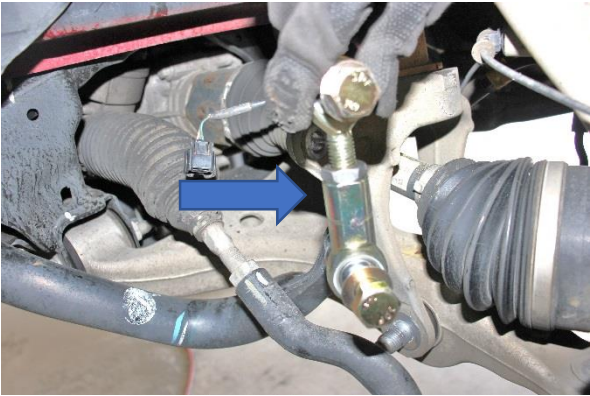


Step 5

Step 5. Install the Eibach end link.

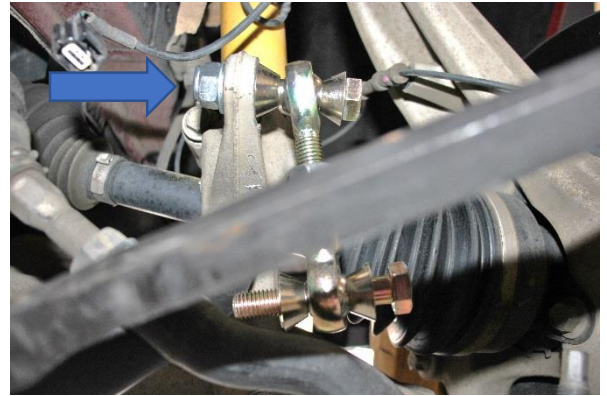


Step 6

Step 6. Attach the upper end link mount to the clevis with the provided hardware.

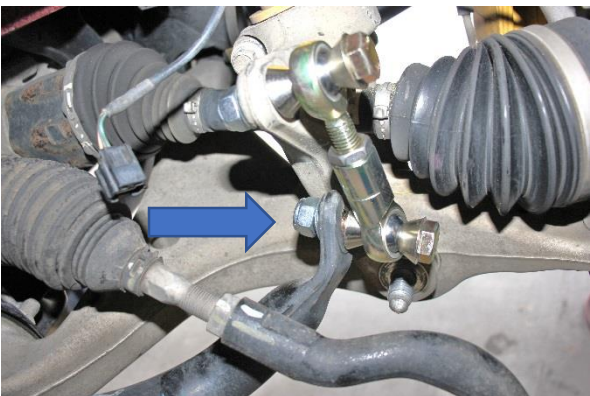

Step 7

Step 7. Attach the lower end link mount to the anti-roll bar with the provided hardware..

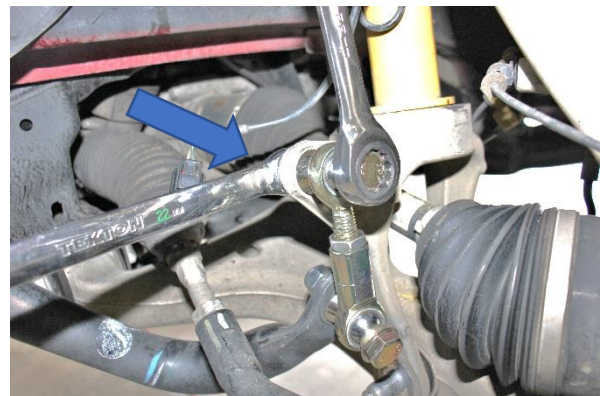


Step 8

Step 8. Tighten the upper end link mount



Step 9

Step 9. Tighten the lower end link mount.

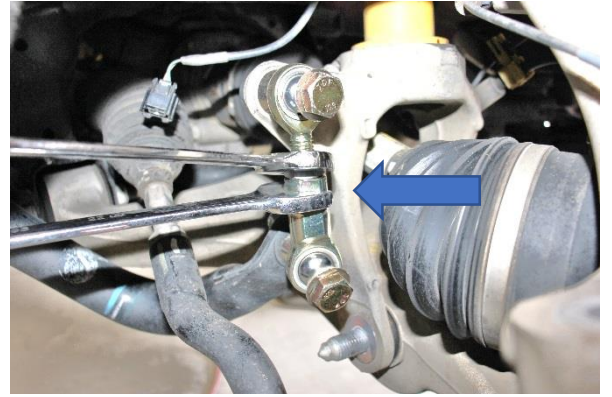

Step 10

Step 10. Make sure the ends are properly aligned, then, tighten the jam nut
