



SPYDERTM

SKU# 5002365



**SCAN THE QR CODE TO
VIEW THE INSTALL VIDEO**

PACKAGE CONTENTS:



• 2X TAIL LIGHT ASSEMBLIES

FITMENT:

• 2005-2008 DODGE MAGNUM



FACEBOOK.COM/SPYDERAUTO

LINKEDIN.COM/COMPANY/SPYDER-AUTO

INSTAGRAM.COM/SPYDERAUTO

TWITTER.COM/SPYDERAUTO

TIKTOK.COM/@SPYDERAUTO



**SCAN THE QR CODE
TO VISIT OUR WEBSITE**

WARNING: BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM TECHSUPPORT@SPYDERAUTO.COM. IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO WWW.P65WARNING.CA.GOV



TOOLS REQUIRED:

- PANEL POPPER




STEP 1:

DISCONNECT THE NEGATIVE BATTERY TERMINAL


STEP 2:

REMOVE (2X) PLASTIC RETAINERS USING THE PANEL POPPER

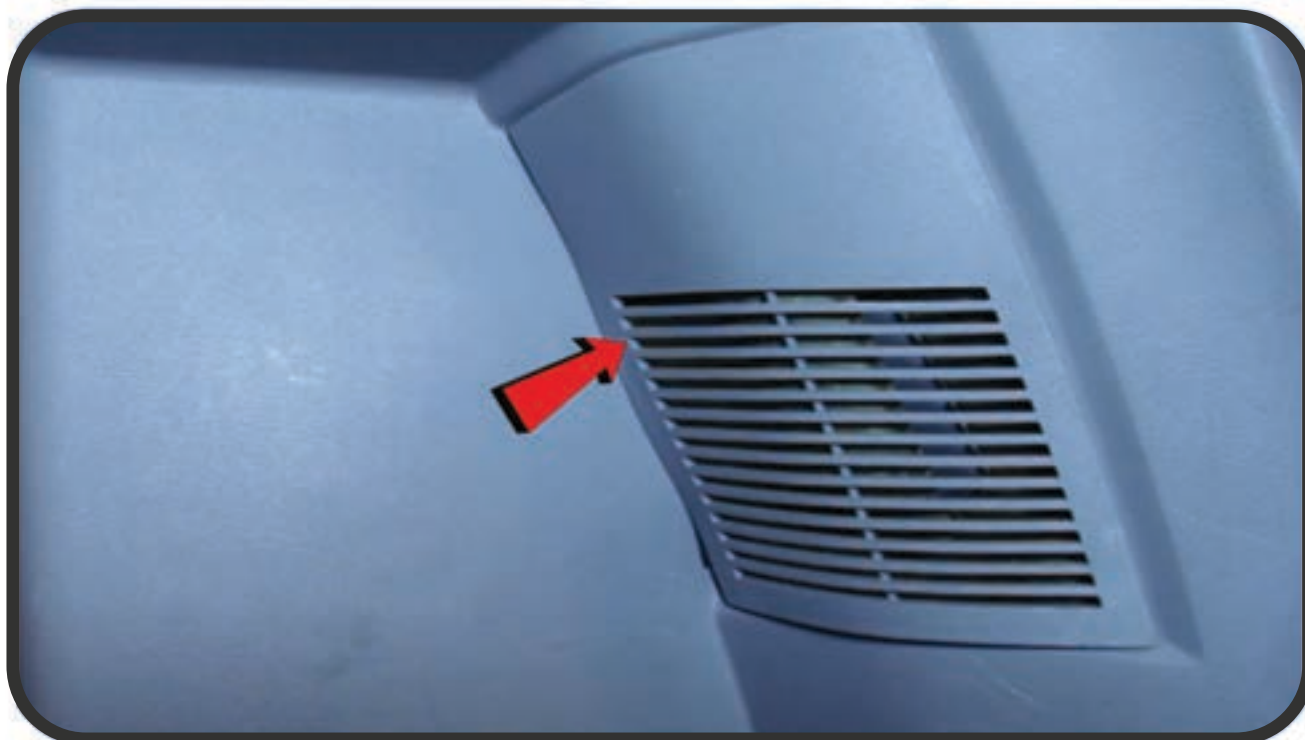
STEP 3:

REMOVE TAIL LIGHT ACCESS COVER


STEP 4:


REMOVE (1X) THUMBSCREW SECURING THE TAIL LIGHT


STEP 5:

UNSEAT TAIL LIGHT



STEP 6:
DISCONNECT TAIL LIGHT HARNESS

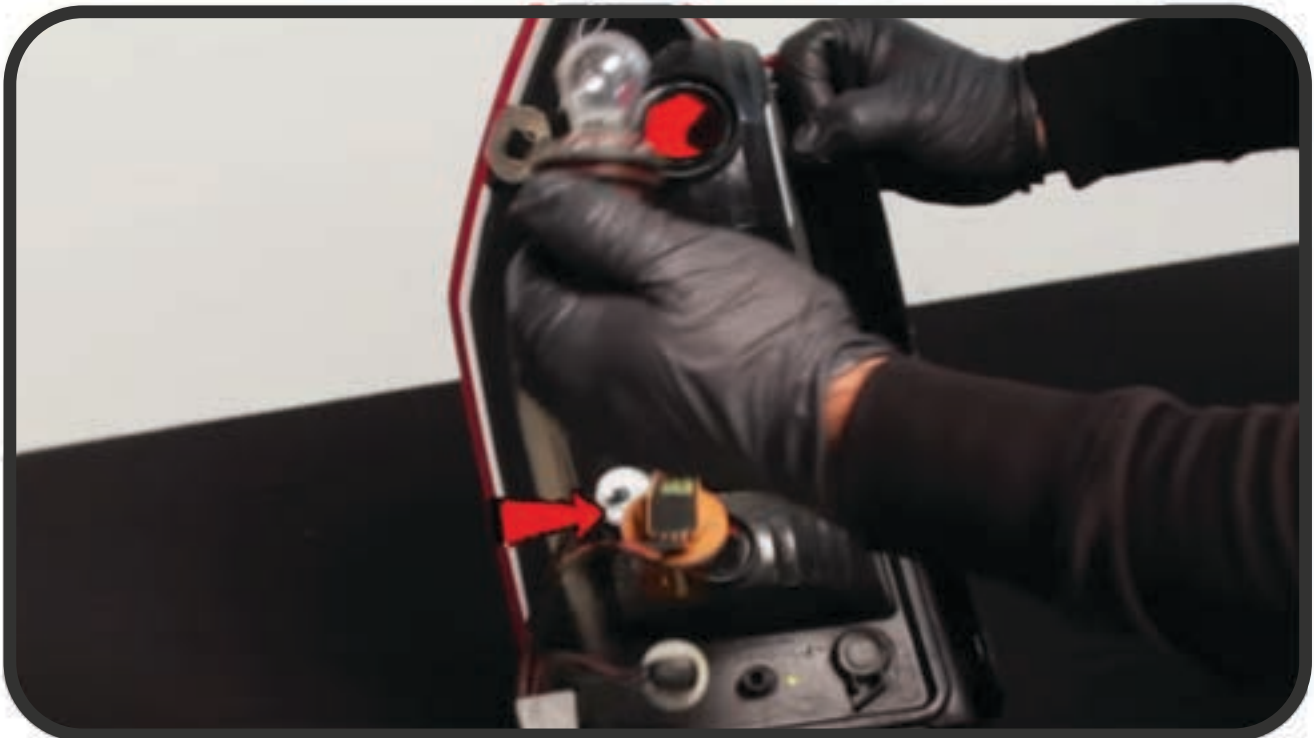

STEP 7:
REMOVE BULB SOCKETS FROM TAIL LIGHT, NEXT REMOVE HARNESS FROM TAIL LIGHT. (MAKE SURE NEVER TO TOUCH BULBS WITH BARE HANDS)


STEP 8:

REMOVE BRAKE LAMP BULB FROM SOCKET


STEP 9:

INSTALL REVERSE SOCKET AND TURN SIGNAL SOCKET INTO SPYDER TAIL LIGHT


STEP 10:


**INSTALL THE SOCKET INSERT INTO THE BRAKE LIGHT SOCKET
MAKING SURE TO LINE UP THE BLACK WIRE ON THE SOCKET TO THE
BLACK WIRE ON THE SOCKET INSERT**


STEP 11:

CONNECT WIRING HARNESS TO SPYDER TAIL LIGHT



STEP 12:
SEAT SPYDER TAIL LIGHT

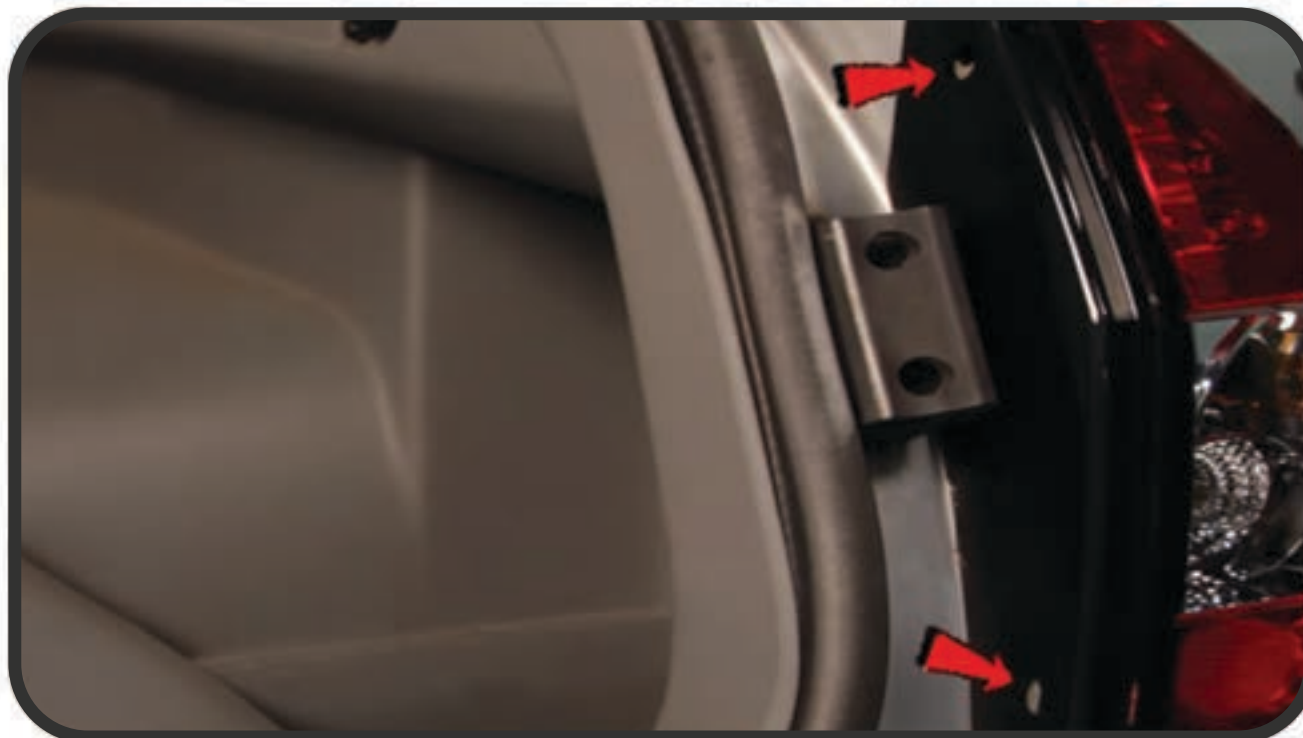

STEP 13:
REINSTALL (2X) PLASTIC RETAINERS

**STEP 14:****REINSTALL THUMBSCREW SECURING TAIL LIGHT****STEP 15:****REINSTALL ACCESS COVER**


STEP 16:

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY