



# SPYDER™

## SKU# 5017543



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



- 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 2009-2018 DODGE RAM 1500
- 2010-2018 DODGE RAM 2500/3500
- INCANDESCENT MODEL ONLY ( NOT COMPATIBLE WITH LED MODEL )

[FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)

[LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)

[INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)

[TWITTER.COM/SPYDERAUTO](https://www.twitter.com/spyderauto)

[TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

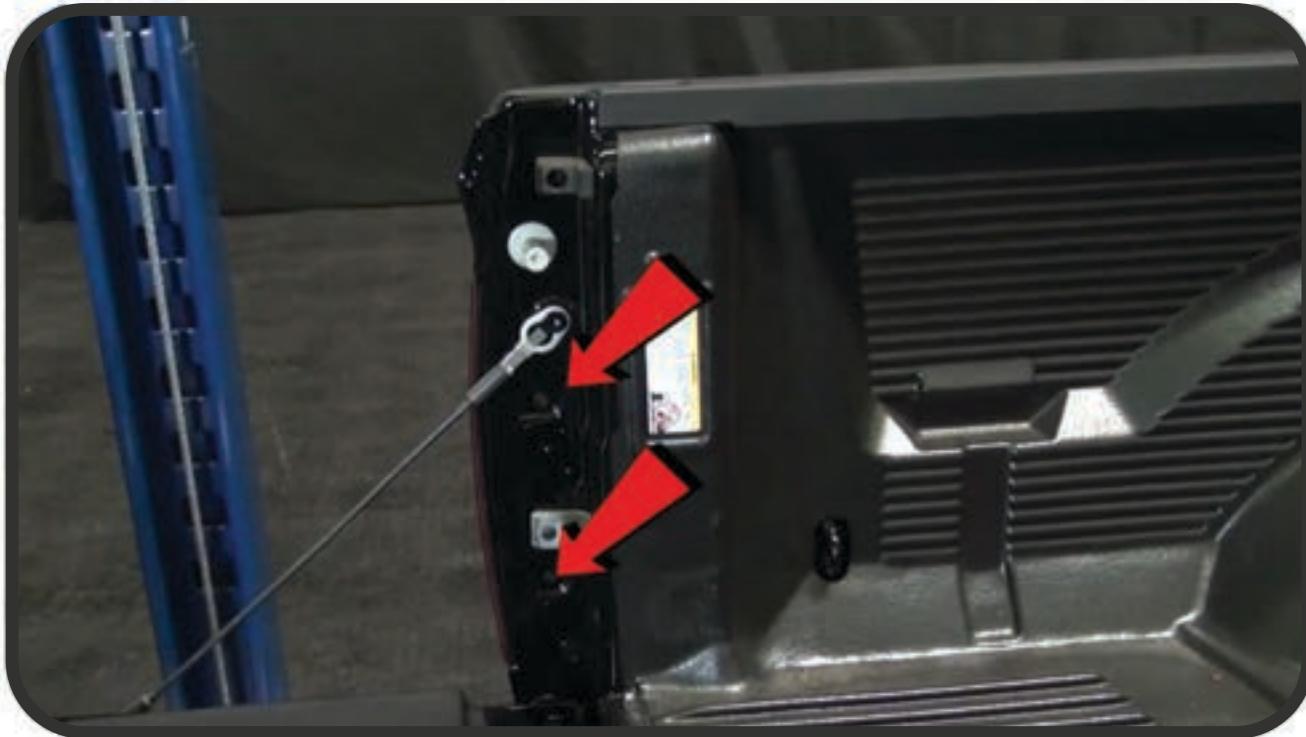
**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM) IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:**

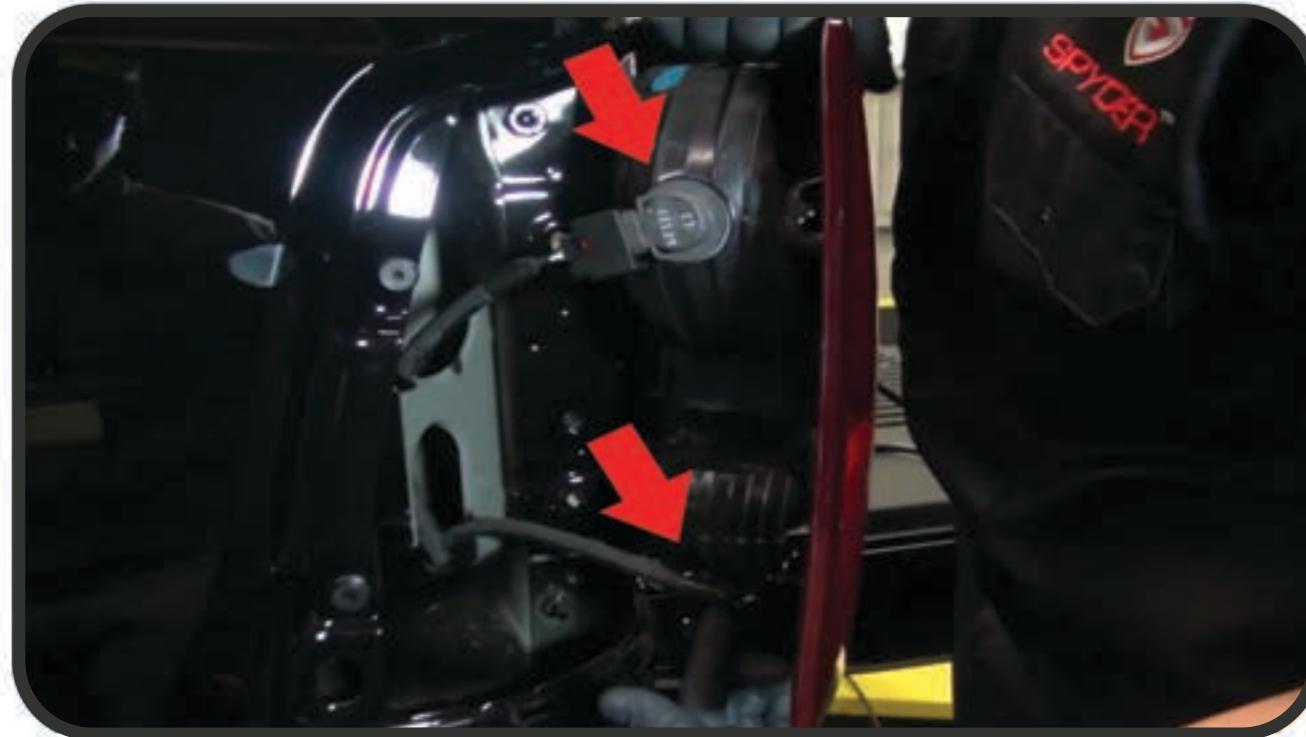
- RATCHET
- T15 TORX SOCKET

**STEP 1:**

**DISCONNECT THE NEGATIVE BATTERY TERMINAL**

**STEP 2:**

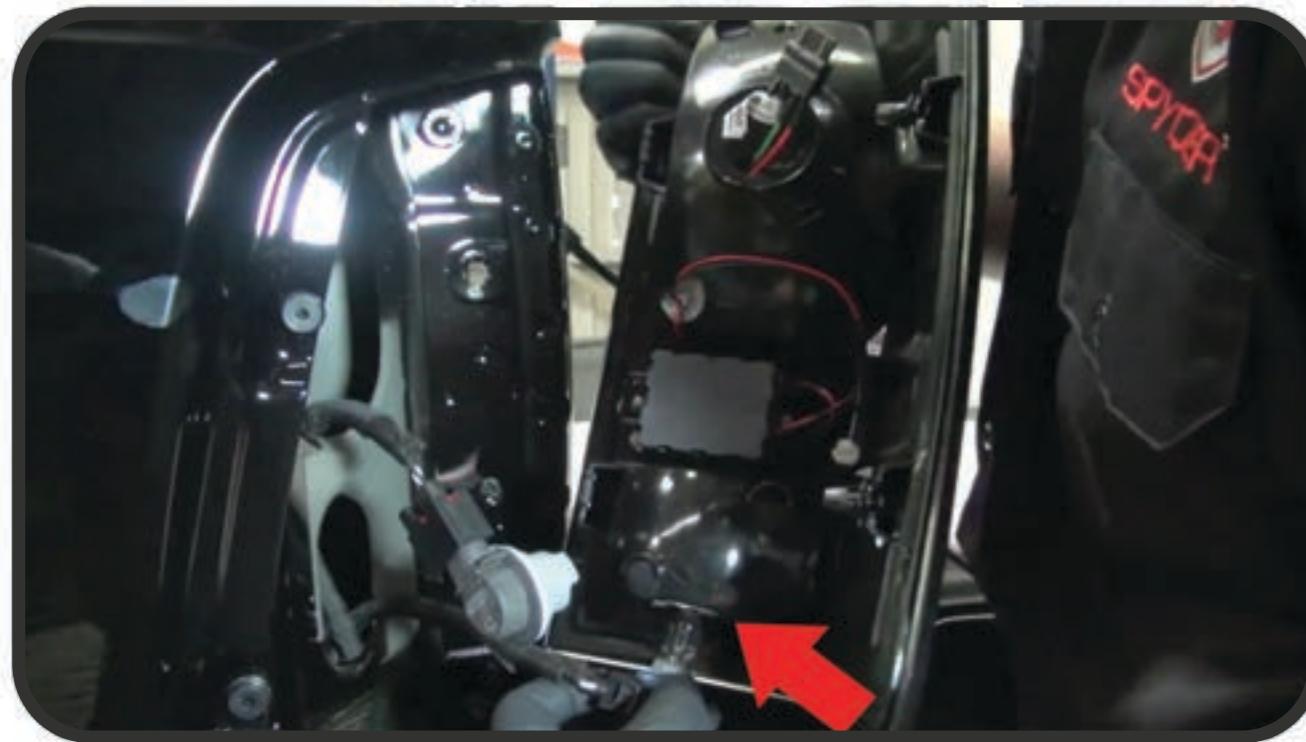
OPEN YOUR TAILGATE AND LOCATE THE (2) TORX SCREW BOLTS. REMOVE THESE (2) BOLTS

**STEP 3:**

SLIDE THE TAIL LIGHT OUT OF ITS SEATING EXPOSING THE BRAKE/SIGNAL AND REVERSE SOCKETS. REMOVE THE SOCKETS BY TURNING THEM COUNTERCLOCKWISE

**STEP 4:**

**REMOVE THE BRAKE/SIGNAL BULB  
FROM ITS SOCKET. (NOTE: DO NOT TOUCH THE BULB WITH  
YOUR FINGERS)**

**STEP 5:**

**TAKE YOUR NEW SPYDER TAIL LIGHT AND INSTALL THE  
REVERSE BULB AND SOCKET HARNESS INTO THE BOTTOM SOCKET  
OF THE TAIL LIGHT HOUSING**

**STEP 6:**

FROM THE NEW TAIL LIGHTS CONNECT THE LED CLIP INTO THE SOCKET HARNESS. INSERT WITH BLACK WIRE ON THE BLACK WIRE SIDE OF SOCKET

**STEP 7:**

SEAT THE BRAKE/SIGNAL BULB SOCKET INTO THE UPPER SOCKET OF THE TAIL LIGHT HOUSING AND TWIST CLOCK WISE TO SECURE A TIGHT SEAL

**STEP 8:**

SEAT THE TAIL LIGHTS BACK INTO POSITION AND REINSTALL (2) T15 TORX SCREWS

**STEP 9:**

RECONNECT THE BATTERY AND TEST THE FUNCTIONS  
TO ENSURE THEY FUNCTION PROPERLY