



# SPYDER™

## SKU# 5005656



SCAN THE QR CODE TO  
VIEW THE INSTALL VIDEO

### PACKAGE CONTENTS:



- 2X TAIL LIGHT ASSEMBLIES

### FITMENT:

- 1999-2004 JEEP GRAND CHEROKEE

[FACEBOOK.COM/SPYDERAUTO](https://www.facebook.com/spyderauto)

[LINKEDIN.COM/COMPANY/SPYDER-AUTO](https://www.linkedin.com/company/spyder-auto)

[INSTAGRAM.COM/SPYDERAUTO](https://www.instagram.com/spyderauto)

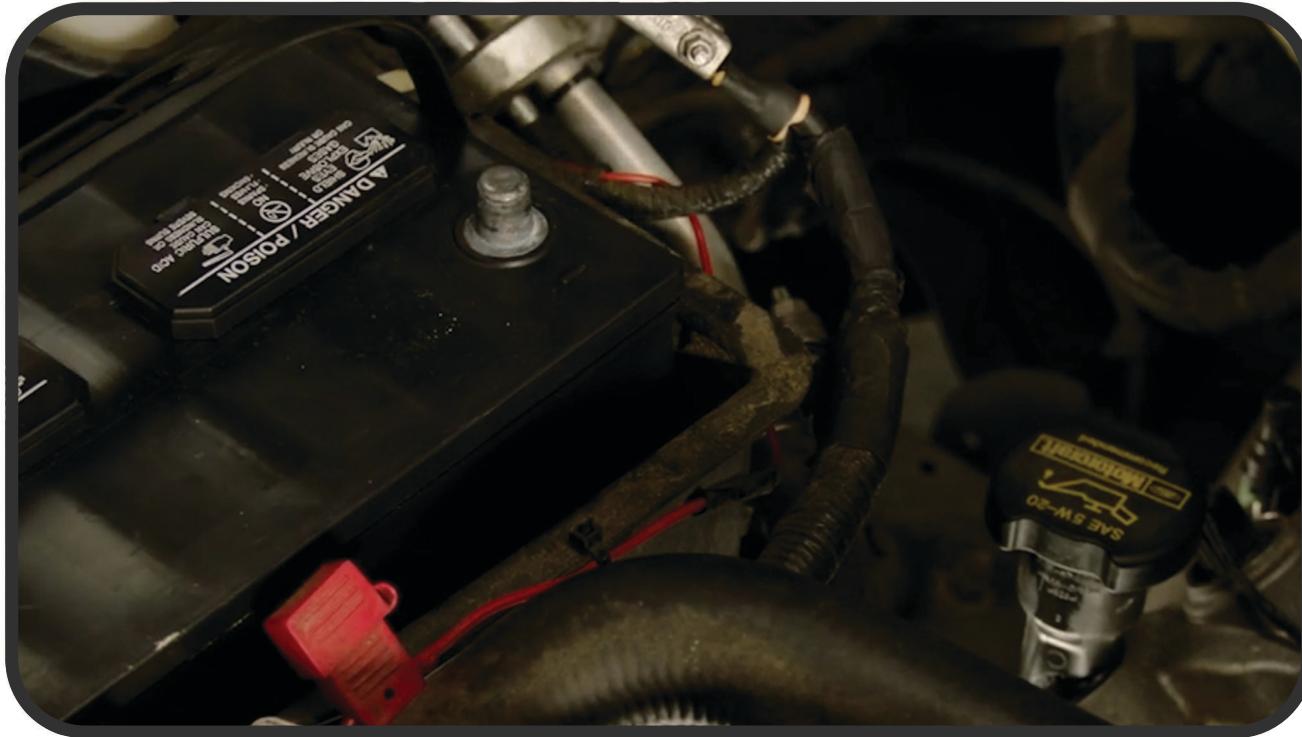
[TWITTER.COM/SPYDERAUTO](https://www.twitter.com/spyderauto)

[TIKTOK.COM/@SPYDERAUTO](https://www.tiktok.com/@spyderauto)



SCAN THE QR CODE  
TO VISIT OUR WEBSITE

**WARNING:** BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. SPYDER AUTO NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED. FOR ANY ISSUES OR QUESTIONS ABOUT YOUR SPYDER PRODUCT, REACH OUT TO OUR TECH SUPPORT TEAM [TECHSUPPORT@SPYDERAUTO.COM](mailto:TECHSUPPORT@SPYDERAUTO.COM). IT IS THE INSTALLER'S RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. THIS PRODUCT CAN EXPOSE YOU TO CHEMICALS INCLUDING CHROMIUM (HEXAVALENT COMPOUNDS), WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. FOR MORE INFORMATION GO TO [WWW.P65WARNING.CA.GOV](http://WWW.P65WARNING.CA.GOV)

**TOOLS REQUIRED:****- PHILLIPS SCREWDRIVER****STEP 1:****DISCONNECT THE NEGATIVE BATTERY TERMINAL**



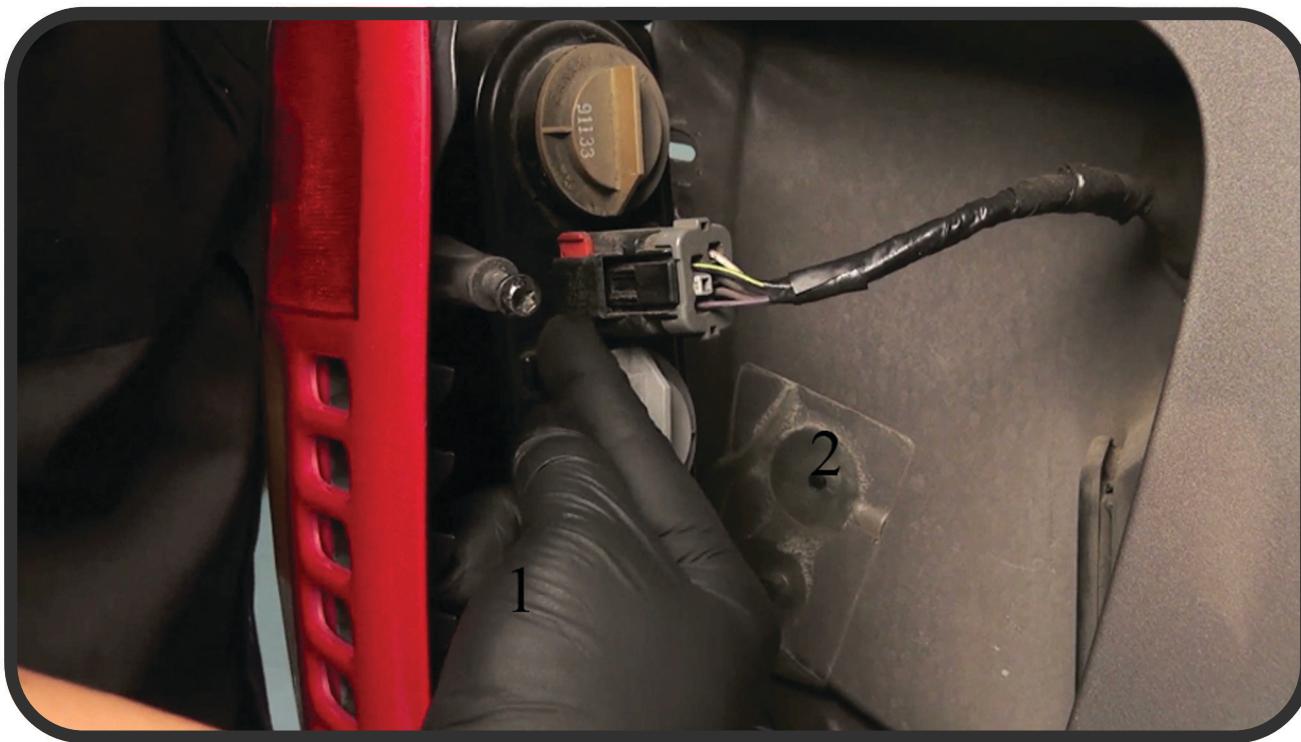
**STEP 2:**  
**OPEN THE TAIL GATE**



**STEP 3:**  
**REMOVE (2) PHILLIPS SCREWS SECURING THE TAIL LIGHT**



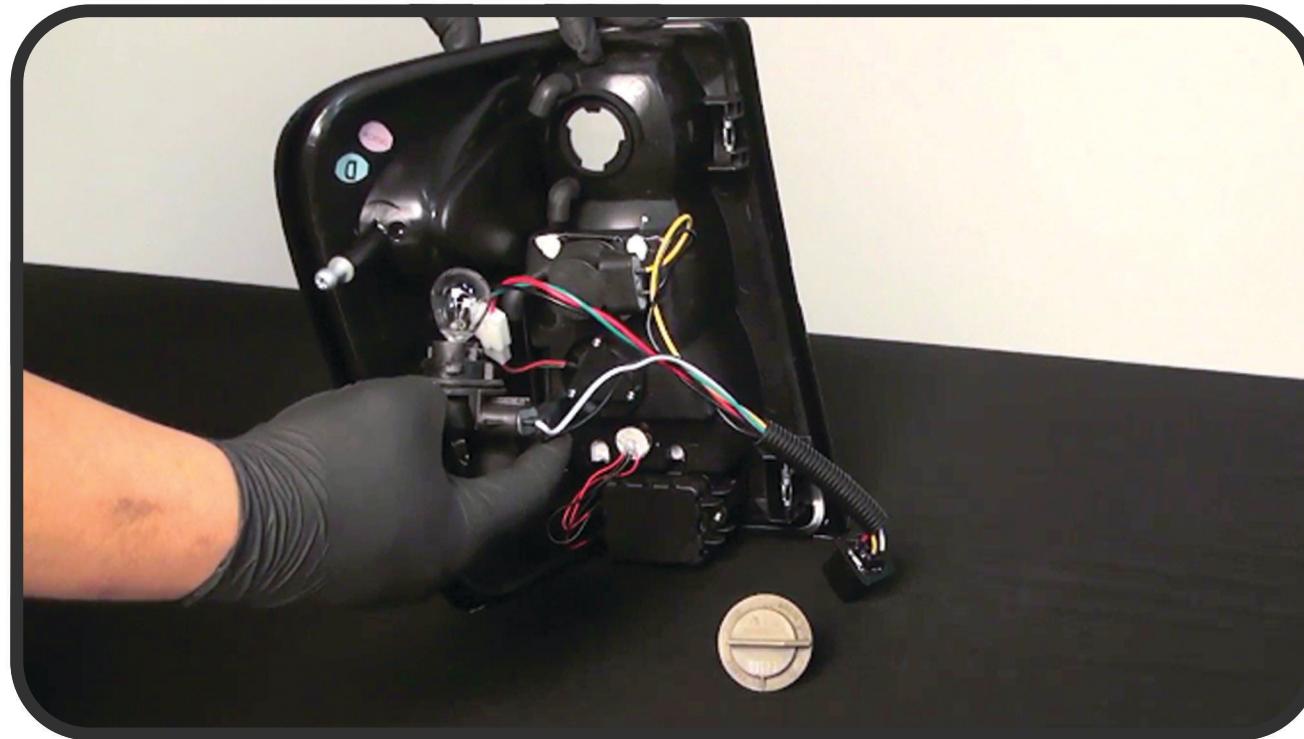
**STEP 4:**  
UNSEAT THE OLD TAIL LIGHT



**STEP 5:**  
DISCONNECT THE TAIL LIGHT HARNESS BY PUSHING UP ON THE RED TAB TO UNLOCK IT

**STEP 6:**

**REMOVE THE REVERSE BULB SOCKET FROM THE OLD TAIL LIGHT  
AND REMOVE THE REVERSE BULB  
(NOTE: NEVER TOUCH BULBS WITH BARE HANDS)**

**STEP 7:**

**TRANSFER THE REVERSE BULB TO THE WHITE AND BLACK WIRE  
REVERSE SOCKET OF THE SPYDER TAIL LIGHT, THEN REINSTALL THE  
SOCKET**

**STEP 8:**

**CONNECT THE SPYDER TAIL LIGHT TO THE TAIL LIGHT HARNESS**

**STEP 9:**

**SEAT THE SPYDER TAIL LIGHT**

**STEP 10:**

REINSTALL THE (2) PHILLIPS SCREWS TO SECURE THE TAIL LIGHT AND CLOSE THE TAIL GATE

**STEP 11:**

RECONNECT THE BATTERY AND TEST THE FUNCTIONS TO ENSURE THEY FUNCTION PROPERLY