

2020+ Ram TRX

CORSA
PERFORMANCE

Part #: CC0008



IMPORTANT! WARRANTY AND INSTALLATION INSTRUCTIONS

Please Forward All Information to Consumer

Be sure to review the enclosed instructions prior to beginning the installation process. If you have any questions about the enclosed parts or instructions, or if you encounter a problem during installation:

CALL TECHNICAL SUPPORT: 440.891.0999 or 800.486.0999

**TO ACTIVATE YOUR WARRANTY GO TO:
CORSAPERFORMANCE.COM/WARRANTY**

COLOR INSTRUCTIONS ARE AVAILABLE BY PART NUMBER ON: CORSAPERFORMANCE.COM



NEVER work on a hot engine bay.
Allow time for the vehicle to cool.

INSTALL DIFFICULTY



RECOMMENDED TOOLS & SUPPLIES

- 13mm Socket Wrench
- 2.5mm Hex Wrench
- 11/16" Wrench
-

Please take time to read and understand these installation instructions.

CORSA recommends that the installation of this system be performed by a qualified service center or professional installer who has the necessary equipment, tools, and experienced personnel. However, if you decide to perform this installation yourself, the use of an additional person may be required.

WARNING: Never work on a hot engine bay. Allow time for the vehicle to cool.

This warranty does not extend to damaged or defect in the finish of a product or to any product, that in the opinion of CORSA Performance, has been misused, damaged by accident or negligence, altered or modified in any way, faulty installation or installed contrary to CORSA installation instructions, or repaired by an unauthorized service facility.

Full warranty available on www.corsaperformance.com

Please confirm that all parts are present according to the bill of materials before beginning the installation.

If something is missing call Tech Support at 440.891.099 or Toll Free: 1.800.486.0999




HARDWARE KIT

1. 5/8" NPT Elbow Fitting	2	3. 5/8" Quick Disconnect Elbow Fitting	2	5. 4mm Hex Screws	3
2. Catch Can Body	1	4. Bracket	1	NOT PICTURED:	
				7. 5/8" Hose A	21"
				8. 5/8" Hose B	25"

REMOVAL INSTRUCTIONS

FACTORY
PCV LINE

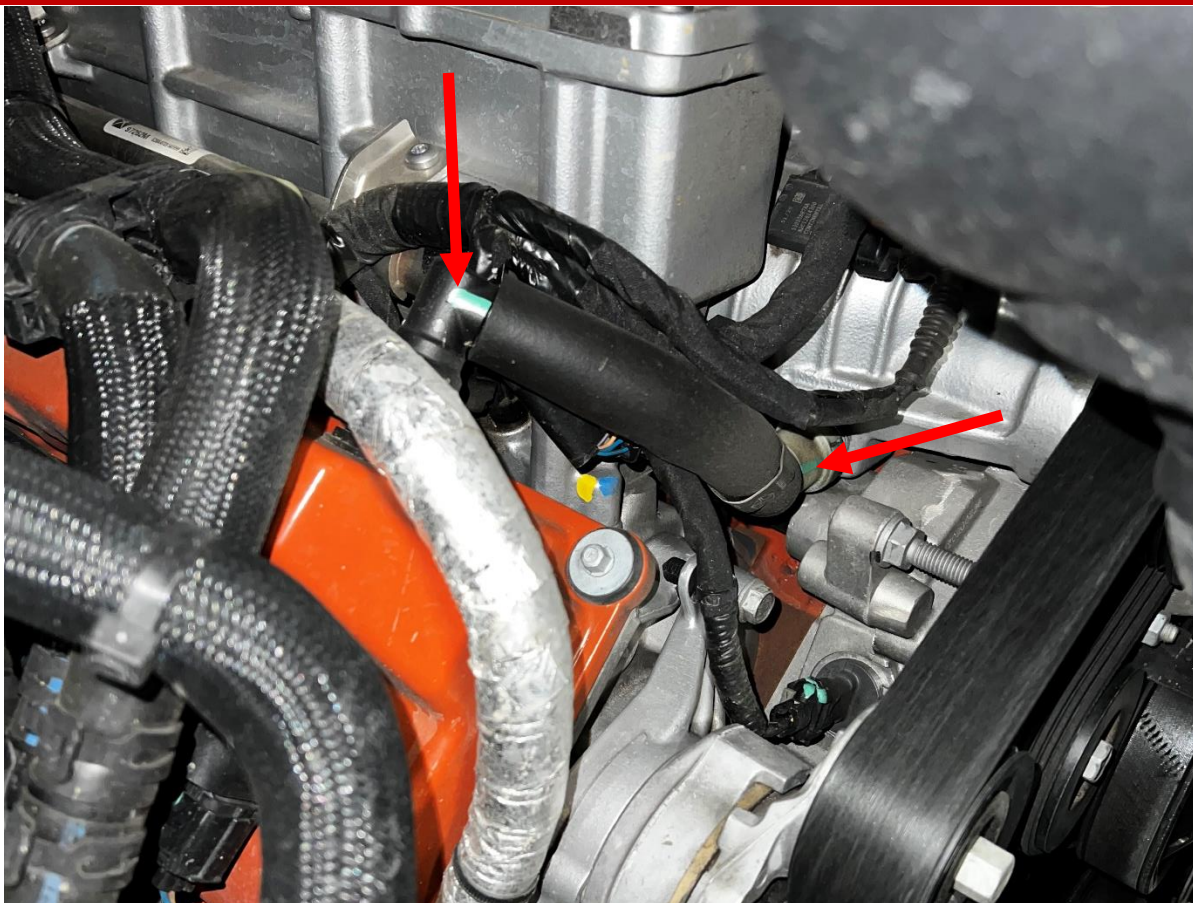

1. Locate the factory PCV line underneath the air intake on the passenger side of the engine. Remove the factory PCV line by pressing on the tabs on the quick disconnect fittings and pulling.

This concludes removal instructions.

INSTALLATION INSTRUCTIONS


CORSA CATCH CAN SYSTEM




1. Install fittings with an 11/16" Wrench. Use a 2.5mm Hex wrench to secure bracket to the catch can. **IMPORTANT:** Corsa recommends using thread sealant or PTFE tape on barbed fittings and bottom drain plug to prevent any leaks.



2. Use a 13mm socket to remove the bolt located on the passenger side of the engine bay. Install catch can and bracket in this location and reinstall bolt to secure the can in place.

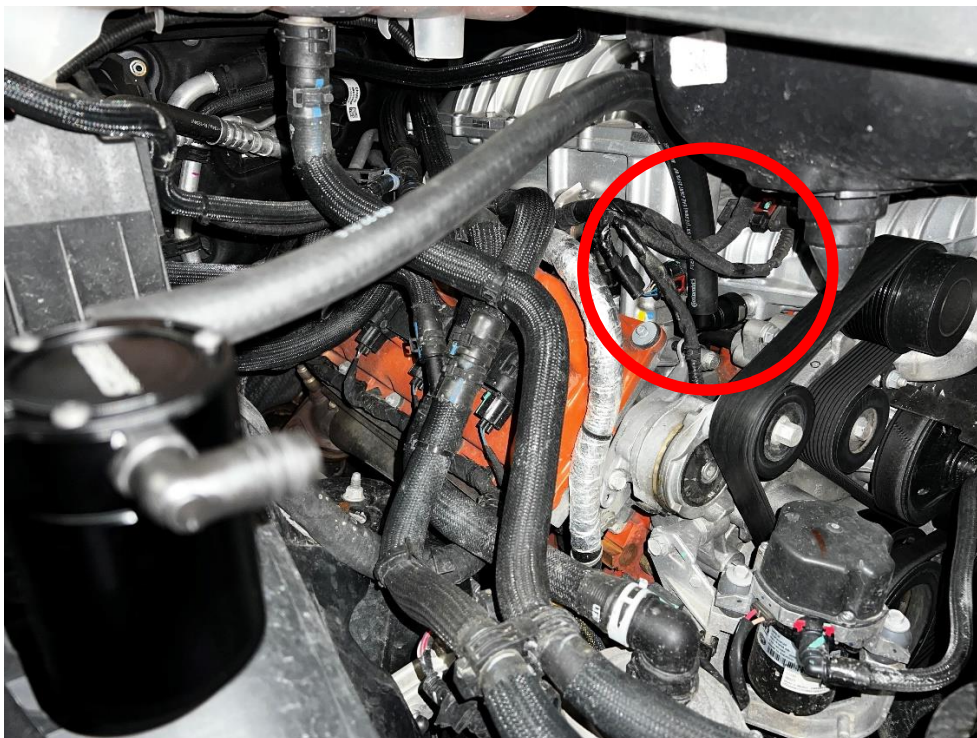

3. Attach quick disconnect elbow fittings to one end of each of the provided hoses. Install Hose B to the B side of the catch can and route the hose to the SILVER fitting on the engine. Make sure the hose gets routed ABOVE the 2 wiring harness lines to avoid potential contact with the supercharger pulley.

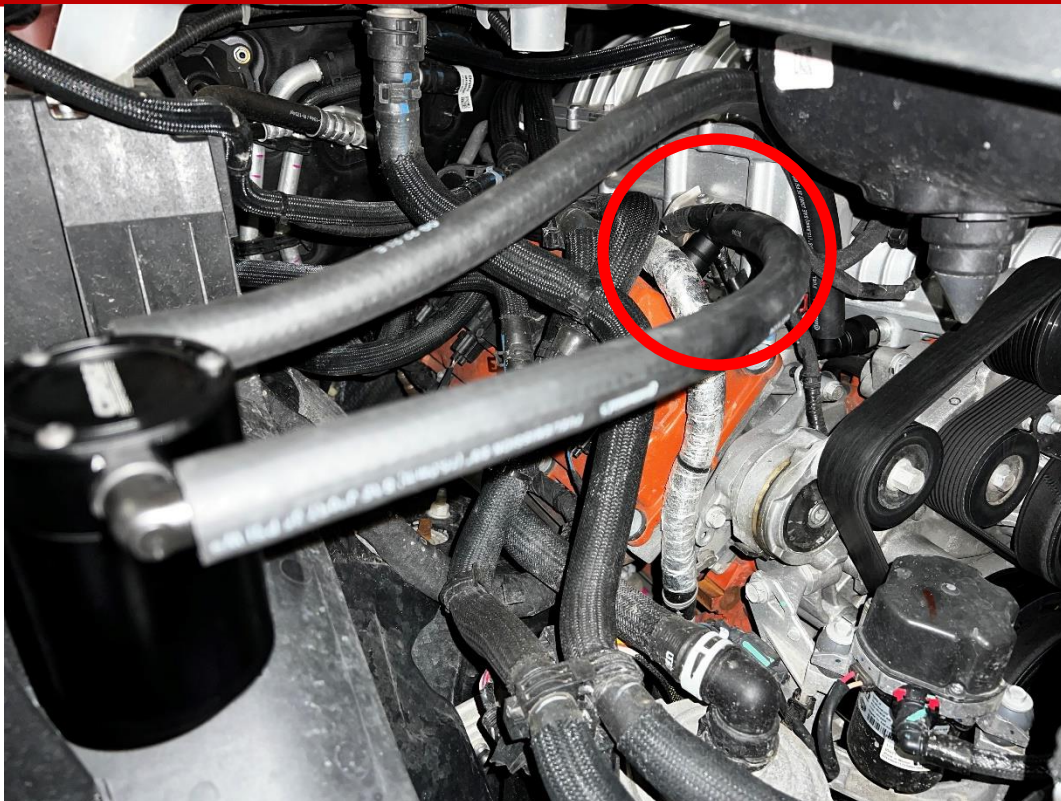

4. Install Hose A to the A side of the catch can and route the hose to the BLACK fitting on the engine. Make sure all fittings are secured in place and hose is pushed all the way over the barbed ends of the fittings.

This concludes installation instructions.

*Check that this catch can complies with your Federal, State and Local laws.
We recommend saving your stock PCV line.*

BEFORE ROAD TESTING

1. Start engine, leaving the transmission in park and securing the parking brake.
2. Make sure to look and listen for any unusual noises or air leaks. Repair problems if needed.
3. Once completed it will be necessary to check periodically, after a few heat cycles, for realignment and tightening of all connections.

EMPTYING CATCH CAN: Twist off the bottom of the catch can and dispose of the collected oil. It is recommended to check and empty the catch can with every oil change.